Model No: _____

IMEI No 1: _____

IMEI No. 2 : _____

Date of Purchase: [ ][ ] [ ][ ] [ ][ ]
dd   mm   yy

Dealer Name: _____

DEALER SEAL WITH ADDRESS
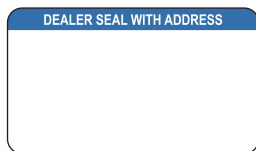
SETTINGS
In the standby mode, press LSK key to access Menu
> Settings. Multi SIM settings
You can set the dual SIM mobile phone accordingly:
> Multi SIM open;
> Only SIM1 SIM open;
> Only SIM2 SIM open; Phone **Settings**

- **Date and Time**
  Set home city: You can set home city as your need.
  Set time/date: Set current time and date and turn on/off Daylight saving.
  Set format: Set the displaying format of time and date and Date separator with "." ":" "/" and "–".
  Update with time zone: Set on/off for this function.
- Auto Power On/Off: Set scheduled power on/off time.
- Language: Select the phone language.
- Pref. input method: Define the default input method.
- Display settings: Set wallpaper/ Screen saver/power on and off display/show date and time/clock type.
- Dedicated key: You can configure short cut functions for the direction Up, Down, Left, and Right key respectively. In the standby mode, press any one of them to access the appointed function.
- Auto update time: Set Auto update time on/off.
- Misc. settings: Set the brightness and time of LCD backlight.

Network Settings
Please Contact the network operator for the following network service. SIM1 SIM/ SIM2 SIM Network Selection: You can choose Automatic or Manual mode to select the network.

EBook reader
You can read eBooks with this function. You can operate font size, scroll by, scroll speed, and select storage as your need in global settings.

Call Settings
SIM1/SIM2 SIM Call Settings
- Caller ID: to select Set by network, Hide ID or Send ID
- Call waiting: Activate, the network will notify you of a new incoming call while you have a call in progress (Network Service).
- Call divert: This network service allows you to divert your incoming calls to anther number. For details, Contacts your service provider.
- Call barring: Activate, this network service allows you to restrict incoming calls from your device. For details, Contacts your service provider.
- Line switching: to change Line1 or Line 2.

Advanced settings
- Blacklist: Set On/Off for blacklist and add blacklist numbers.
- Auto call recorder: Set auto call recorder on/off.
- Auto redial: Set On/Off for auto redial in this option. If the first call isn't connected successfully, the mobile phone will redial for ten times at most automatically.
- Call time display: Set Call time display on/off.
- Call time reminder: Give you single or periodic alert tone in the calling process so that you can know the call time. You can also disable the alert tone..
- Answer mode: answer the phone by any key or auto answer when headset mode.

Privacy
Here you may lock particular option with password. List below: Password- 0000
1. Call Logs
2. Message
3. Camera
4. Contacts
5. File Manager
6. Calendar
7. U Disk
8. Audio Player
9. Video Player

Factory Restore settings
Access the setting, select Reset, enter the password, and follow the prompt to reset and restart the mobile phone. This operation will restore all default settings. Note: For factory reset "0000". The phone will auto power on after shutdown.
- When you select Automatic, the device will make the selection according to the network. If you select Manual, you will have to select the network manually.
- GPRS transfer Preference: Select Data prefer or Call prefer as the Preferred Networks.

User Profiles
The phone provides five pre-defined user profiles that allow the operations of the phone to best suit the environment you are in. The profiles are Normal, Silent, Meeting, Indoor, Outdoor.

Normal
Activate Option
Rename
Alert type: Ring Settings
- Ring type: Ringtone, Vibrate, Silent, Vibrate then Ring, Ring and Vibrate.
- SIM1 SIM Ringtone: Set up the tone of incoming call of SIM1 SIM.
- SIM2 SIM Ringtone: Set up the tone of incoming call of SIM2 SIM.
- Adjust Volume: Set the volume of ringtone.
- SIM1 SIM message: Set up the tone of SIM1 SIM message.
- SIM2 SIM message: Set up the tone of SIM2 SIM message.
- Message volume: Set the volume of message.
- Keypad: Set Click, Tone or Silent.
- Keypad tone volume: Set the keypad volume.
- Power on/off: Set tone of power on/off.
- System alert: Set On/Off.
- Low battery alert

Silent
Ring, Volume and Alert type mustn't be set. You select "Activate" next to "Options". Long press # key to enable/disable silent mode
Outdoor : Please refer to "Normal" for more details.
Indoor : Please refer to "Normal" for more details.
Meeting : Please refer to "Normal" for more details.

Profiles1
Can create, modify, Rename, Add Delete. Make profile as per your choice.

USER MANUAL
Thank You For Your Choosing

BASIC OPERATIONS
To Make Calls
S1 .... S2 ....
If the icon /appears on the screen, then you can make or receive calls.
- Input the phone number (should affix the international/ national/regional code or district code if necessary) and then press the SIM1/SIM2 SIM key to make a call.
- You can select a number from Contacts and call the Contacts person.

Tip: The signal strength may influence the quality of connection.

Input the emergency phone number and press SIM1/SIM2 SIM Key to dial. The device will select the main network automatically after powered on if it is located within the coverage of the main network. The device can use other network, called as roaming, if the device is not located within the coverage of the main network when the network operator protocol permits. You can dial or answer a call when the symbol of the network operator appears on the screen.

Answer/Reject an Incoming Call
- Press Call/SIM1 SIM Key to receive the incoming call. You can use the earphone to answer the call when the generic headset is inserted in the device.
- Press End Key to reject an incoming call.

Options during a Call
Press <Options> to use the following functions during the call:
- Hold: temporarily hold the current call.
- End single call: end the current call.
- New call: to make a new call.
- Phonebook: access the Contacts menu.
- Call logs: view call logs.
- Messages: enter in the SMS menu.
- Mute: on/off the mute mode.
- Connect Blue Tooth
- Call recording
- Volume: Adjust volume of call.

PHONEBOOK
Phonebook refers to the directory wherein all the Contacts are stored in an alphabetical order. You can view, edit, delete, send message and perform various other functions on each contact of your phonebook. Press LSK key in the standby mode and then select phonebook.

Add New Contact
- Go to Main Menu > Phonebook > Add new Contact
- Press ok and enter the Contacts details

Search Contact
- Go to phonebook > contacts and input the initials of a name to be searched.
- Select a desired entry from the list.

Select a Contact from the list and press Ok/Center Key to perform the following operations:
- View: view the detailed info of the selected Contacts.
- Send text message: send message to the Contacts.
- Send multimedia message: Send new multimedia message to the selected contact.
- Call: call the Contact.
- Edit: edit the Contact information.
- Delete: delete the Contact.
- Copy: Copy the entry to phone memory, SIM memory or to file.
- Send business card: Send business card as text message/multimedia message/via Bluetooth.
- Add to Blacklist: Add the selected number to blacklist.

MESSAGES
Your device features, sending and receiving of SMS and MMS (Short Message Service and multimedia message). Press LSK key to access Main Menu and then select Messages.

Write message
You can create and send SMS or MMS to a particular Contact using this sub-menu. Inbox

Inbox sub-menu enables you to view all the messages received on your SIM1/SIM2 SIM.

Drafts
The created messages can be saved to drafts folder for future use. After selecting a message from the Drafts folder, you can select Options to edit, delete and so on.

Outbox
All the sent but failed messages get stored in the Outbox folder Sent messages. All sent messages get stored in the sent message folder.

Security Inbox
All message keep in this Inbox is save with password. This help in privacy.

Broadcast messages
Cell broadcast is the service that the network operator sends messages such as weather report and traffic to the GSM subscribers in specified area.
- Receive mode: Enable/disable message receiving.
- Channel settings: Select, add, edit or delete the channel.
- Languages: Set the language of received message.

Templates
Your device is provided with some commonly used predefined messages. These messages can be edited and send instantly.

- **Text message**
  - Memory status: You can check the memory status of the SIM cards or mobile phone in this menu.
  - Text msg. counter: to check the counter of sent/received messages.
  - Save sent message: Set On/Off.
  - Preferred storage: Set the preferred storage position of the messages (SIM cards or mobile phone).

- **Service message**
  With this function, you can receive service messages from Internet, including weather, news, financial info, etc. This service is provide by network operator, It is invalid if the SIM card and your network operator don't support this function. Please contact your network operator for more information.

CALL LOGS
Call Logs lets you view the call details i.e. the missed, received & dialled call logs. In the standby mode, press LSK key to access Menu > Call logs. Scroll up/down using the navigation keys to select a call and then press OK key to view the details and perform operations, such as View, Call, Delete and Edit before call.

All Calls
With this function, you can check recent all calls. Press OK key to access dialled call information, and perform operations, such as View, call, send text message, edit before call or delete.

Dialled Calls
With this function, you can check recent dialled calls. Press OK key to access dialled call information, and perform operations, such as View, call, send text message, save to phonebook, edit before call or delete.

Missed Calls
With this function, you can check recent missed calls. Scroll the Up/Down keys to select a missed call. Press OK key to access missed call information, and perform operations, such as View, call, send text message, edit before call and delete.

Received Calls
With this function, you can check recent received calls. Press OK key to access received call information, and perform operations, such as View, call, send text message, edit before call or delete.

MULTIMEDIA
This menu is specifically designed for the entertainment purpose of the user. To enter this menu, go to the Main Menu and select Multimedia. The various multimedia features offered by your device include Camera, Image Viewer, Video Recorder, Video Player, Audio Player, Sound Recorder and FM Radio.

Camera
Your device is provided with a Camera, which supports the photographing and video shooting functions.

Image Viewer
Pictures taken can be accessed quickly through Image Viewer. Select an image to view and press ok key to perform operations, such as, delete, use the image as wallpaper.

Video recorder
In standby mode, select Menu > Multimedia > Video recorder to launch the video recorder and shoot your videos.

Video Player
Your device supports playing various video formats. To access the Video Player, go to Multimedia and select Video Player. All the videos available in the storage selected by you will be displayed. Select a video clip and press OK key to open it.

Audio Player
Audio player allows you to play audio files. Please save your audio files in the My Music folder of the memory card. You can stop, pause, play and switch to the next/previous song/adjust volume using the navigation keys.

Sound Recorder
You can record conversations, which will be saved to the Audio folder under File Manager. After selecting a recording, you can select to play, rename, delete, delete all files etc.

FM radio
You can use your device to listen to FM radio stations after inserting the headphones. Go to Main Menu > Multimedia > FM radio. When in the Radio interface, press options to view channel list, Manual input, Auto search, settings, record and file list.

FILE MANAGER
File manager enables you to browse, open and manage the data saved in Memory card. The device provides a certain space for users to manage files and supports the Memory card. You can use the file manager to conveniently manage various directories and files on the Memory card. Choose Files to enter the root directory of the memory. The root directory will list the default folders, new folders and user files.

BLUETOOTH
In the Bluetooth interface, you can perform the following operations:
- Power: on/off the Bluetooth.
- Visibility: Set on/off.
- My device: Support below options: searching new Bluetooth device, update service record, rename device, and delete no used device.
- Search audio devices: Searching devices like headset. Activate the Bluetooth function before searching.
- My name: Display my Bluetooth name and you can edit name as your need.
- Advanced: Set the Audio path, storage and view my address.

FUN & GAMES
- This mobile phone having 2 preloaded games.
- Game settings: You can select game.
- Start new game any time.
- Continue from where you left.
- Select any level from 1 to 15.
- Help guide you to play game.

Tool
The Tool menu gives you access to a number of features including Calendar, Tasks, Alarm, World clock, Torch, Calculator, EBook reader is placed in MMC card when we insert card .

Calendar
You can view and edit the memo of a specified date with this function.
- View: View the events of the day you have selected.
- View all: View the all events.
- Add event: To add a new event.
- Delete event: To delete a event.
- Jump to Date: Skip to the specified date to view or edit the daily arrangements of the day.
- Go to today: You can switch to the current date.
- Go to weekly view: to view the calendar on weekly.
- Settings: To set the calendar English or Hindu; set info display on/off.
- Help: check some details about this calendar.
- Start of week: set Sunday or Monday.

Alarm
Your device provides 3 alarms and you can set them as per your need. If you have configured an alarm, an icon indicating that you have configured the alarm will appear on the status bar.

World clock
Press left/right navigation key to browse every city's time zones in the world map. The related date and time will display in the phone's screen.

Torch
Go to organizer > press "0" key to turn on /off the torch.

Calculator
The mobile phone is provided with a calculator with basic functions. You can carry out the basic arithmetic operations using the in-built calculator of your device.